

Adept Audio®

Outdoor Speaker Specifications & Installation Manual

VERSION 2026-06



adeptaudio.co.nz

IO80B • IO80W • IO60B • IO60W • IO50B • IO50W

Adept Audio®

Thank you for buying Adept Audio Ceiling Speakers. Our loudspeakers deliver superior sound quality, underpinned by the expertise of leading designers who have developed product lines for the world's leading architectural audio brands for more than 30 years.

This manual provides all the necessary information for installation. If for any reason you experience problems or if you have installation questions, please contact us at info@connectedmedia.co.nz or 0800 232 0023

Table of Contents

Warranty Information - 3

Certifications - 3

What's Included - 4

Speaker Cable Choice - 4

70/100V Taps (IO80 Only) - 4

Speaker Placement - 5

Mounting the Speakers - 5

Installing the Speakers - 5

Connecting the Speaker Cables - 6

Specifications - 6

Troubleshooting - 7



Distributed exclusively by Connected Media

info@connectedmedia.co.nz

Phone 0800 232 0023

Warranty

Adept Audio warrants to the original end user only that our products will be free from defects in materials and workmanship, provided the product was purchased from an Adept Audio authorised dealer.

The following warranty periods apply:

- 10 years for passive indoor speakers
- 3 years for active electronics and outdoor speakers

If the product is determined to be defective, it will be repaired or replaced at Adept Audio's discretion. If the product must be replaced yet it is no longer manufactured, it will be replaced with a model of equal to or greater value that is the most similar to the original. If this is the case, installing the replacement model may require mounting modifications; Adept Audio will not be responsible for any such related costs.

This warranty may not be valid if the product was purchased through an unauthorised dealer. This warranty only applies to the individual that made the original purchase, and it cannot be applied to other purchases. The purchaser must be prepared to provide proof of purchase (receipt). This warranty will not be valid if the identifying number or serial number has been removed, defaced, or altered.

Requirements & Warranty Coverage

All warranties and warranty conditions are subject to change.

These conditions are not covered by warranty:

- Accidental damage
- Damage caused by abuse or misuse
- Damage caused by attempted repairs/modifications by anyone other than Adept Audio or an authorised service agent
- Damage caused by improper installation
- Normal wear, maintenance and environmental issues
- Damage caused by voltage input in excess of the rated maximum of the unit
- Damage inflicted during the return shipment

Certifications

Adept Audio IO50, IO60 and IO80 meet the following standards:

IEC 60529: IPX4 rated

What's Included

One Pair of Speakers • Mounting Template • Grille Removal Key • Installation Manual

Tools You'll Need:

Speaker Wire • Pencil • Wire Stripper • Bubble Level • Measuring Tape

Speaker Cable Choice

If you are running speaker cables through walls and ceilings, make sure your cables are CL3-rated for in-wall use.

To ensure the best performance from the speakers, use stranded speaker wire of the appropriate gauge for the length of the wire run.

- 0 - 30m: 16 gauge – We recommend Kordz ONE Series 16AWG Speaker Cables
- 15 - 45m: 14 gauge – We recommend Kordz ONE Series 14AWG Speaker Cables
- Over 45m: 12 gauge – We recommend Kordz ONE Series 12AWG Speaker Cables
- Wiring outdoors in direct NZ sunlight? Try Kordz UV-Resistant Speaker Cables



kordz.nz

70/100V Taps (IO80 Only)

The IO80's 70/100-volt option is advantageous when the design calls for multiple speakers from the same amplifier and/or long-distance wire runs. This feature can be used only with amplifiers that have a 70- or 100-volt mode -- 70V is more common in the U.S., while 100V is more common in other countries, especially in Europe.

The IO80 has a tap switch that controls 70/100V, 4-ohm operation. The tap switch is located on the front baffle of speaker. To access the switch, remove the grille carefully using the included grille removal key. You will have to set this switch to suit your amplifier's power and the number of speakers you have. To determine the best tap switch setting, take the rated power of your amplifier and multiply it by 0.8. Divide this number tap setting of the speakers to find the number of speakers you can drive. For example, with a 200-watt amp using speakers set for a 30-watt tap, you'd divide 160 by 30 to get 5.33, so you can safely run five speakers from that amp channel. You can reduce the tap setting on the speakers to 15 watts to run twice as many speakers, but the higher the tap switches are set, the better the sound quality will be.

When daisy-chaining multiple speakers, add the combined wattages of all tap settings to determine the wattage draw on the amplifier. The combined total wattage should never exceed the wattage rating of the amplifier.

For 70V systems, the IO80 offers taps for 60W, 30W, 15W and 7.5W. For 100V systems, the available taps are 60W, 30W and 15W. Note that the IO80 also offers a 4-ohm switch setting for use with conventional amplifiers. By default, the tap switch is set at 4-ohms.

Speaker Placement

The IO50, IO60 and IO80 can be placed vertically or horizontally, indoors or outdoors. The included bracket allows the speaker to swivel, in order to better direct the sound to the listeners. For a small seating area, two speakers will probably be enough, but getting consistent coverage over multiple seating areas or an entire backyard will require additional pairs of speakers. Typically, placing a pair of speakers so that the speakers are about 3 to 5m apart and equidistant from the main listening seat will give the best results.

Mounting the Speakers

Make sure that the bracket is securely mounted onto a structurally sound surface that can support the weight of the speaker and bracket, and will not be affected by vibrations coming from the speaker. In general, a screw size of M4 by 50mm is recommended.

INDOORS: It's best to install the mounting screws directly into wall studs. Drywall anchors can also be used when mounting into studs is impractical, but make sure the anchors are heavy-duty models rated for at least double the weight of the speakers.

OUTDOORS: If the speakers are attached to eaves, wood roofing or wood fences, the mounting screws can be driven directly into the material. If mounting the speakers on stucco or masonry walls, use masonry anchors rated for at least double the weight of the speakers.

Installing the Speakers

When you've decided on the locations for all of the speakers, remove the bracket from each speaker. Use a pencil to mark inside the mounting bracket holes so you can tell where the holes will be when you drill. You may wish to use a bubble level along the edge of the bracket to make sure the speaker is level.

Drill a hole where each mounting bracket screw or drywall or masonry anchor will go, using a drill bit of the recommended size for the screw or anchor you are using. If you're using anchors, place the anchors in the holes. Now align the bracket with the mounting holes, insert the screws, and tighten them firmly. Put the speaker in the bracket, and install the threaded mounting knobs in each end of the speaker and tighten them enough to secure the speaker in the bracket.

Connecting the Speaker Cables

To connect a speaker cable, first strip 1cm of insulation from each conductor of the cable, and lightly twist the exposed strands between your fingers to make sure there are no stray strands sticking out. Be sure to connect the positive half of the cable (usually marked with a line on the side, or sometimes with red or white insulating jacket) to the positive speaker cable connector, which is marked with a red dot. Unscrew each speaker cable binding post until you see the hole in the post's center shaft. Put the stripped end of the wire through the hole, making sure the bare wire contacts the metal post, and tighten the binding post. Give the cable a light tug to make sure it's firmly connected. Repeat with the other half of the cable. Make sure there are no stray strands of wire that might contact the other half of the speaker wire and create a short circuit.

You may also choose to crimp spade lug or banana plug connectors onto the cable. If you use spade lugs, unscrew the posts a few turns, insert the spades, and tighten the post down. If you use banana plugs, simply remove the plastic covers at the ends of the binding posts and insert the plugs into the holes in the ends of the binding posts. Be sure to connect the positive conductor to the red binding post, and the negative conductor to the black binding post.

Specifications

IO50B, IO50W

5 ¼" Injection-Molded Polypropylene (IMPP) Woofers
 1" Pivoting Aluminum-Dome Tweeters
 Power Handling: 75 Watts
 Frequency Response: 55Hz-20kHz
 Impedance: 8 ohm
 Sensitivity: 89dB, 1W/1m
 Dimensions: 191 x 213 x 270mm

IO60B, IO60W

6 ½" Injection-Molded Polypropylene (IMPP) Woofers
 1" Pivoting Aluminum-Dome Tweeters
 Power Handling: 100 Watts
 Frequency Response: 45Hz-20kHz
 Impedance: 8 ohm
 Sensitivity: 90dB, 1W/1m
 Dimensions: 224 x 240 x 317mm

IO80B, IO80W

8" Injection-Molded Polypropylene (IMPP) Woofers
 3" Injection-Molded Polypropylene (IMPP) Midrange
 1" Pivoting Aluminum-Dome Tweeters
 Power Handling: 150 Watts
 Frequency Response: 39Hz-20kHz
 Impedance: 4 ohm
 Taps: 70V - 60W/30W/15W/7.5W
 100V - 60W/30W/15W
 Sensitivity: 91dB, 1W/1m
 Dimensions: 253 x 273 x 381mm

Troubleshooting

No sound from all speakers: Make sure the amplifier and source device (music streamer, CD player, Bluetooth receiver, etc.) are turned on, music is playing, and the volume is turned up. Check the connections between the source device and the amp to make sure they are firmly connected and that the cables are in good condition. If all units are on and the connections are good, disconnect the AC cord from the amp, wait for 5 minutes, plug it back in and try again.

No sound from one speaker: Check the cable connections on the speaker and the amplifier. If they are good, check the connection from the source device to the amp, to make sure both stereo channels are connected. If all these connections are good, disconnect the speaker's cable, remove it from the mounting bracket, reconnect it near the amp with a short cable, and try again. If the speaker works, the installed cable between the speaker and the amp is damaged and will have to be spliced or replaced. If the speaker still doesn't work with a direct cable to the amp (but other speakers connected to that amp do work), unplug the AC cable to the amp, wait 5 minutes, then plug it back in and try the speaker again. If it still doesn't work, contact Adept Audio.

Sound seems unfocused or bass is weak: Check the polarity of the speaker cable connections on the amp and the speaker. The marked (or white or red) conductor of the cable should be connected to the positive (usually red) terminals on the speaker and the amp. The unmarked (or black) conductor should be connected to the negative (usually black) terminals on the speaker and the amp. If the polarity of a connection is wrong, reverse it and listen again.

If you have any questions or concerns about installing or using this product, you can reach us through one of the following methods:



Distributed exclusively by Connected Media

info@connectedmedia.co.nz

Phone 0800 232 0023



adeptaudio.co.nz

Adept Audio®