



TV Fixing Kit Assembly Kit

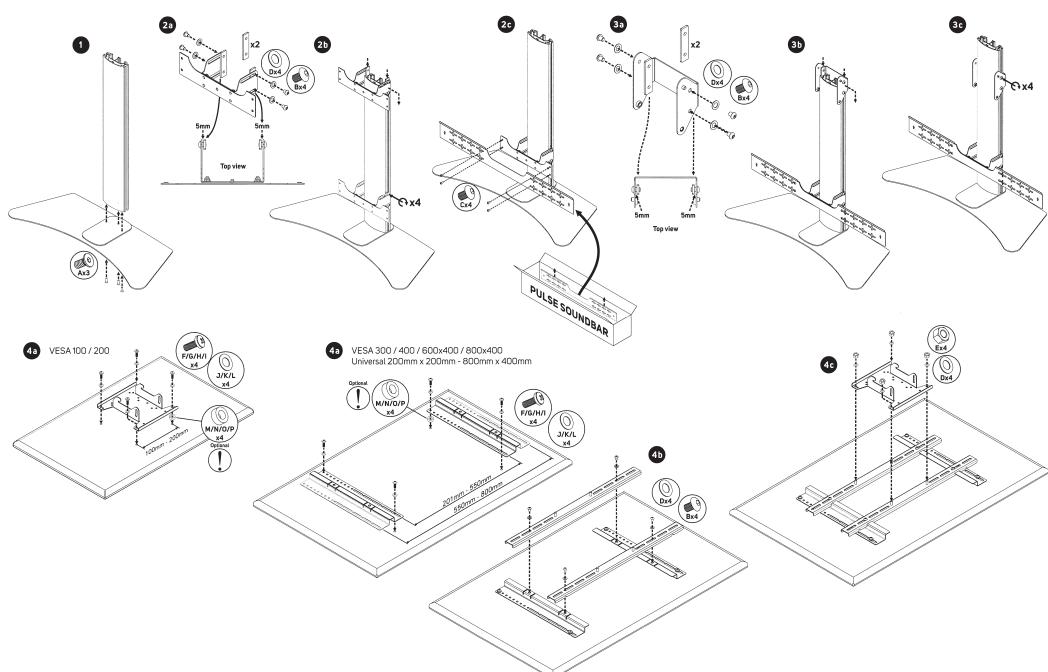

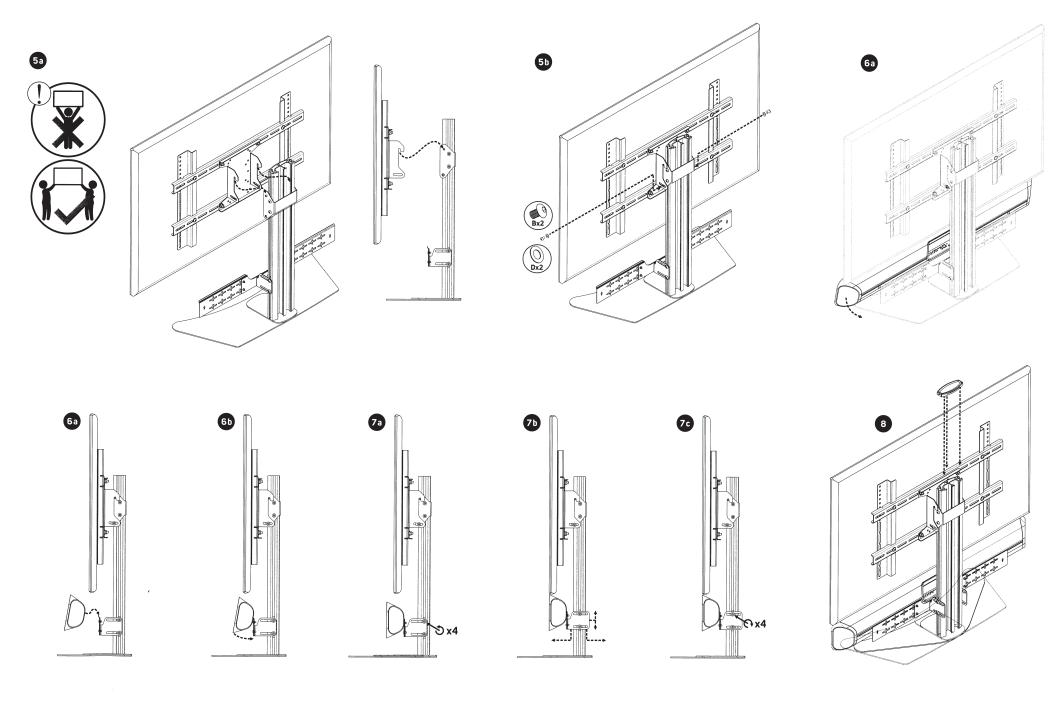



# TS100 Universal TV Stand for PULSE SOUNDBAR

# Standards & Safety Precautions

#### Installation

Bluesound recommends the following:

- Follow all installation instructions for mounting the TV and PULSE SOUNDBAR to the TS100
- Position the PULSE SOUNDBAR as low as possible on the TS100 we recommend not to exceed 1-2" (25-50mm) from the table surface (Figure 1)
- Position the TV as low as possible above the PULSE SOUNDBAR we recommend not to exceed 1" (25mm) from the top of PULSE SOUNDBAR (Figure 1)

## Securing the Stand

Bluesound recommends following precautions to enhance the stability of the TS100. An unsecured TS100 may topple and could result in property damage, bodily injury or even death.

- For extra security, Bluesound recommends tethering the TS100 to a wall and/or stand using wire and a wall anchor (not supplied) (Figure 2)
- Do not allow children to play or climb on nearby furniture or on the TS100 itself
- Avoid placing or hanging additional items on the TS100
- Never install the TS100 on slippery, unstable and/or uneven surfaces or furniture that can easily be used as steps, such as a chest of drawers
- Install the TS100 where it cannot be pulled, pushed or knocked over
- Route all AC Power Cords and connecting cables so that they are not accessible to curious children

## **Please Note:**

- The maximum TV size should not exceed 65"
- The maximum TV weight should not exceed 77 lbs (35kg)
- Some TVs may not be compatible with the TS100

