


QUICK START GUIDE

FULL MANUAL ON HDANYWHERE.COM/SUPPORT

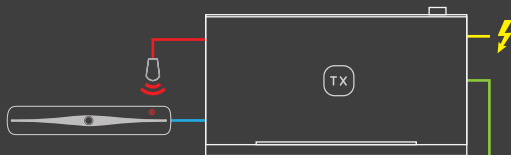

HDMI CABLE

CAT6 CABLE

INFRARED (IR) CABLE

POWER

1 Connect a HDMI source (e.g Satellite/Cable TV, Apple TV, Xbox etc) to the "HDMI IN" of the XTND transmitter (labelled TX) using a HDMI cable. Source devices that exceed the supported bandwidth will be scaled.


2 Connect a Cat6 cable between the "HDBASET" port of the XTND transmitter (TX) and the "HDBASET" port of the XTND receiver (labelled RX).

3 Connect a display to the "HDMI OUT" of the XTND receiver (RX) using a HDMI cable

4 Power on the XTND Extender by connecting the supplied 24V power supply to the XTND (TX). XTND will turn on and a picture will display after several seconds.

5 To control your HDMI source from your display location connect the IR TX to the "IR (OUT)" port on the XTND transmitter (TX). Ensure that the IR TX is positioned over the IR window on your source device.

Connect the IR RX to the "IR (IN)" port on the XTND receiver (RX). Ensure that the IR RX is in-line-of-sight of your source device remote control.

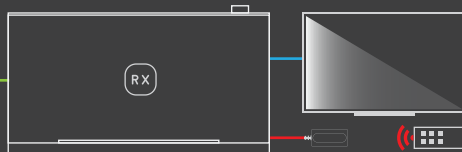


XTND
HDMI EXTENDER

IN THE BOX

FULL MANUAL ON HDANYWHERE.COM/SUPPORT

1x XTND TRANSMITTER (TX)

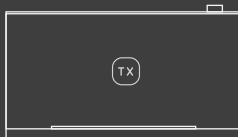


4x MOUNTING WINGS



INSTALL AT SOURCE LOCATION


1x XTND RECEIVER (RX)

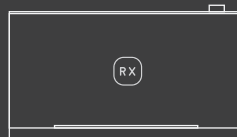

INSTALL AT DISPLAY LOCATION


2x IR RX

2x IR TX

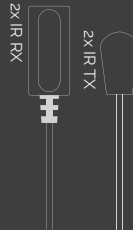

INFRARED (IR) CABLE

1x 24V 1A PSU

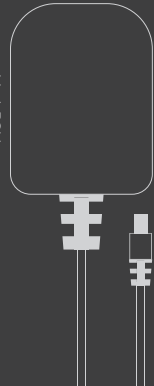

POWER

CAT6 RESOLUTION/DISTANCE GUIDE

HD

0m 0ft	10m 32ft	20m 65ft	30m 98ft	40m 131ft	50m 164ft	60m 197ft	70m 230ft	80m 262ft	90m 295ft	100m 328ft	110m 360ft	120m 393ft	130m 426ft	140m 459ft	150m 492ft
-----------	-------------	-------------	-------------	--------------	--------------	--------------	--------------	--------------	--------------	---------------	---------------	---------------	---------------	---------------	---------------

HDANYWHERE

XTND2K150