


## Volume Control V70V

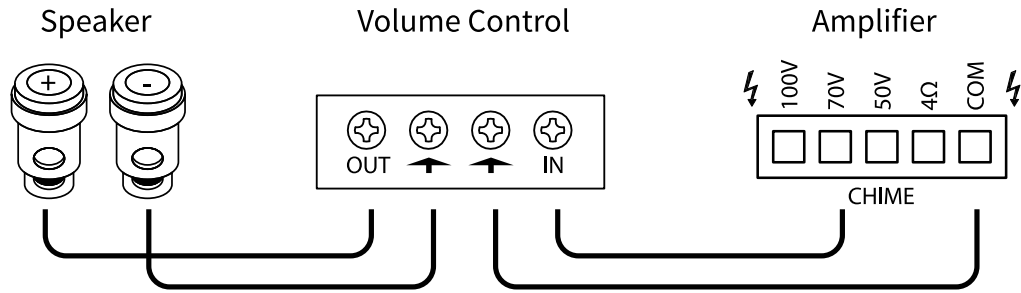

1. Unplug the amplifier and any equipment connected to the amplifier.
2. For each wire that will be connected to the volume control, strip off  $\frac{1}{4}$ " (6mm) of the insulation and twist the ends so that there are no stray ends.
3. For the connectors labeled "IN", insert the wires coming from the amplifier. Be mindful of the polarity. Once the wires are inserted, use a phillips head screwdriver to tighten the "IN" screws to secure the wires.
5. Inspect the connectors to make sure that: a) there's no stray strands that could cause a short, b) the connector isn't tightened on the insulation, and c) there's not an excessive amount of bare wire extending beyond the connector.

**WARNING:** Reversing the connections for the amplifier and speaker will likely damage the volume control, speakers, and amplifier. This damage is not covered by the warranty.

4. For the connectors labeled "OUT", insert the wires coming from the speaker. Be mindful of the polarity. Once the wires are inserted, use a phillips head screwdriver to tighten the "OUT" screws to secure the wires.
6. Insert the volume control into the box or ring.
7. Install the cover plate over the volume control.
8. Reconnect the amplifier and all associated equipment. Test the system.

©2014 Origin Acoustics. All copyrighted, trademarked and patented elements mentioned herein are the sole property of Origin Acoustics.

www.originacoustics.com  
844-674-4461  
techsupport@originacoustics.com

## SPECIFICATIONS

Power Rating:	10W, 70V
Width:	2" (51mm)
Height:	4" (102mm)
Depth:	2.25" (57mm)
Rotary Control	

## WARRANTY

### Two-Year Warranty

Origin Acoustics warrants to the original retail purchaser only that this Origin Acoustics product will be free from defects in materials and workmanship, provided the speaker was purchased from an Origin Acoustics authorized dealer.

If the product is determined to be defective, it will be repaired or replaced at Origin Acoustics' discretion. If the product must be replaced yet it is no longer manufactured, it will be replaced with a model of equal to or greater value that is the most similar to the original. If this is the case, installing the replacement model may require mounting modifications; Origin Acoustics will not be responsible for any such related costs.

## Requirements and Warranty Coverage

This warranty may not be valid if the product was purchased through an unauthorized dealer. This warranty only applies to the individual that made the original purchase, and it cannot be applied to other purchases. The purchaser must be prepared to provide proof of purchase (receipt). This warranty will not be valid if the identifying number or serial number has been removed, defaced, or altered.

This warranty does not cover the following:

- Accidental damage
- Damage caused by abuse or misuse
- Damage caused by attempted repairs/modifications by anyone other than Origin Acoustics or an authorized dealer
- Damage caused by improper installation
- Normal wear, maintenance, and environmental issues
- Damage caused by voltage inputs in excess of the rated maximum of the unit
- Damage inflicted during the return shipment

## Return Process

Before making any return attempts, it is required that you first contact Origin Acoustics. Return product to Origin Acoustics or your dealer, either in person or by mail. It's preferable if the product is returned in the original packaging. If this isn't possible, the customer is responsible for insuring the shipment for the full value of the product.

*This warranty is in lieu of all other expressed or implied warranties. Some states do not allow limitations on implied warranties, so this may not apply depending on the customer's location. (For more information, see Magnuson-Moss Warranty Act.)*